

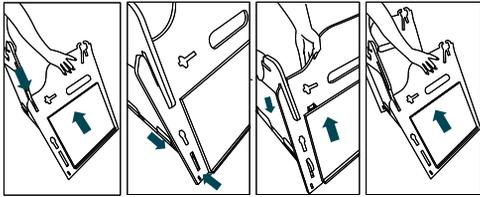
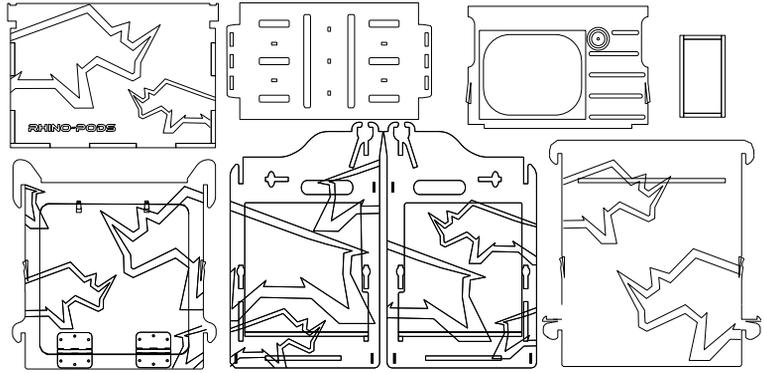


ASSEMBLING YOUR CUCININO POD

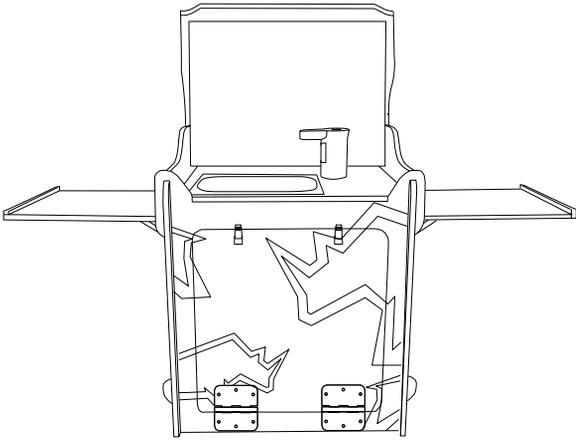

Now you should have the front panel and the two side panels attached together

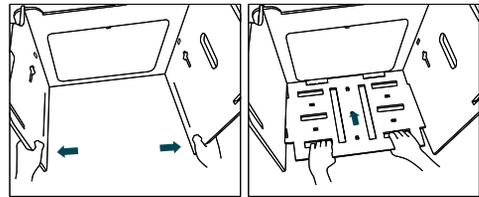

Now you should have the bottom shelf, the front panel, and the two side panels attached together

1. Putting together the sides and front:


Get a side panel and the front panel, and put the front panel into the top and bottom slots in the side panel, with the dip in the side panel towards the front. Push down the front panel to click the two together

Repeat with the other side panel on the other side


(Make sure the etched sides on all panels are facing outward)

2. Putting in the Bottom shelf

Pull apart the two side panels and slide the bottom shelf into the slots in the lower slots of the two side panels.

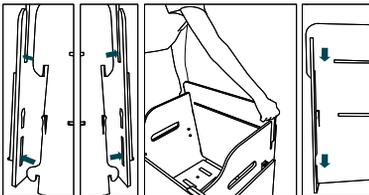

You should now have all four sides, and the bottom shelf attached together

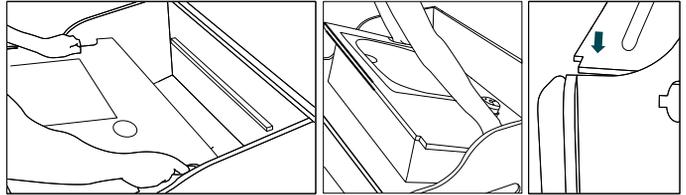


3. Putting in the back panel

Pull apart the side panels again slightly (not so much the bottom shelf drops out), and slot the back panel into the top and bottom slots on one side then the other. Then push the side panels together against the back panel and push the back panel down to click it all into place

4. Putting in the top shelf

Using the handholds at the back of the shelf, push the shelf down so that it clicks and rests on the top of the front panel, and rests on the shelf of the back panel


You should now have the top shelf, all four sides, and the bottom shelf attached together

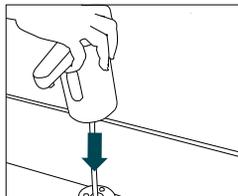


5. Attaching the tap, and water and waste tubes

Put the tap on the pucks on the top shelf with its tube attached, feed the tube out the back of the top shelf, and into the right hand bottle (with the smaller hole in the lid). Fill this bottle with clean water to supply the tap. Try to make sure that this tube does not become kinked, as that will disrupt the water flow.

Put the larger black tube attached to the bottom of the sink into the other, empty, bottle with the larger hole in the lid. You will have to bend the tube. Your waste water will go in here (this is what you will have to empty).

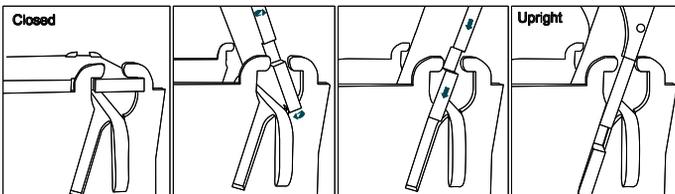

7. Putting on the lid Put the back of the lid into the slots on the top of the side panels, and then turn the

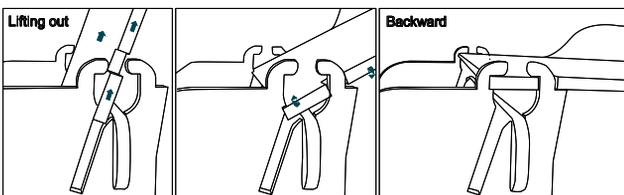

lid in the slots to the closed position. There are three positions for the lid: closed, upright and fully backward.

Now your pod is ready to be stored away, to reassemble your pod follow the instructions on the other side.

Don't be afraid to be rough with your pod, they're built for it!

Enjoy and feel free to leave some feedback or email us info@rhino-pods.com

