

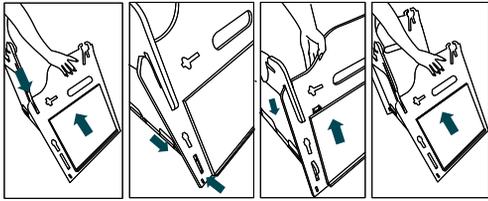
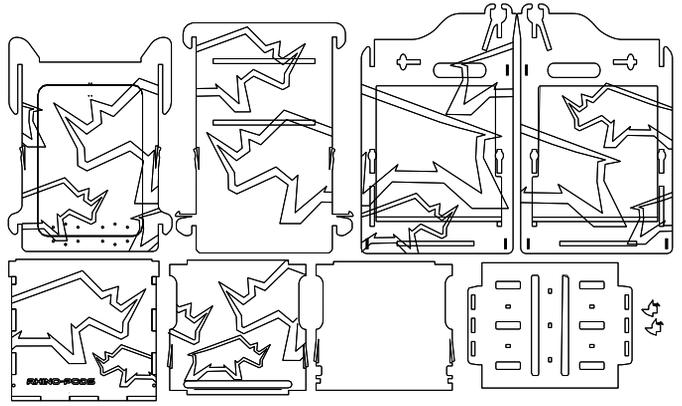


# ASSEMBLING YOUR CAMBIO POD

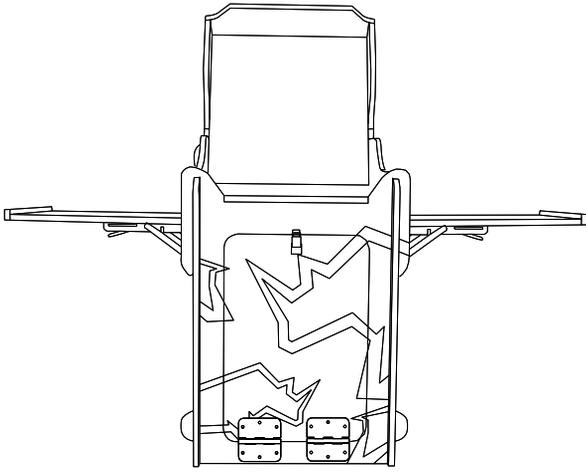


Now you should have the front panel and the two side panels attached together

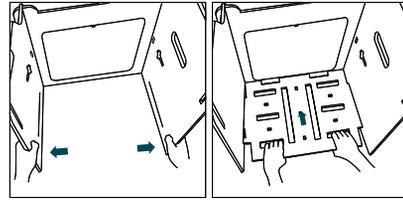


Now you should have the bottom shelf, the front panel, and the two side panels attached together

1. Putting together the sides and front: Get a side panel and the front panel, and put the front panel into the top and bottom slots in the side panel, with the dip in the side panel towards the front. Push down the front panel to click the two together Repeat with the other side panel on the other side (Make sure the etched sides on all panels are facing outward)


2. Putting in the Bottom shelf Pull apart the two side panels and slide the bottom shelf into the slots in the lower slots of the two side panels.

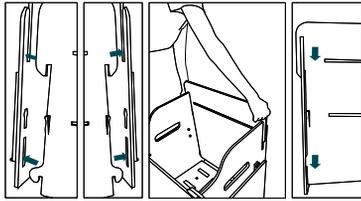

You should now have all four sides, and the bottom shelf attached together




4. Putting in the middle shelf clips (required if putting heavier items on the middle shelf) Push the shelf clips into the holes on the inside of both side panels, then you'll see the holes near the front, middle of the pod.

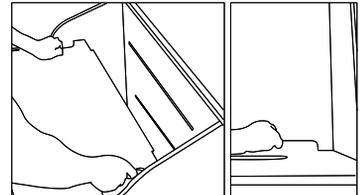

5. Putting in the middle shelf (the not etched one) Using the hand holds positioned at the back on the shelf, slide the shelf down into the pod between the two side panels and insert the back into the lower of the two slots in the back panel. Then push down the front of the shelf so that it clicks into place on the shelf clips.


3. Putting in the back panel Pull apart the side panels again slightly (not so much the bottom shelf drops out), and slot the back panel into the top and bottom slots on one side then the other. Then push the side panels together against the back panel and push the back panel down to click it all into place

You should now have the middle shelf, (the middle shelf clips), all four sides, and the bottom shelf attached together

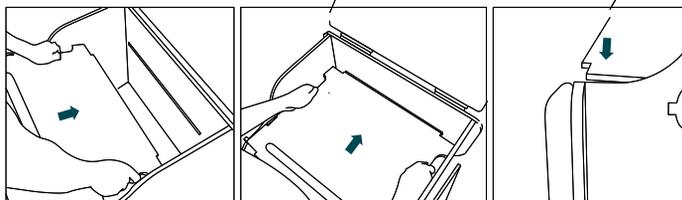

You should now have both shelves, (the middle shelf clips), all four sides, and the bottom shelf attached together

6. Putting in the top shelf (the etched one) Using the handholds at the back of the shelf, slot it into the remaining slot in the back panel. Then push down the front of the shelf so that it clicks and rests on the top of the front panel

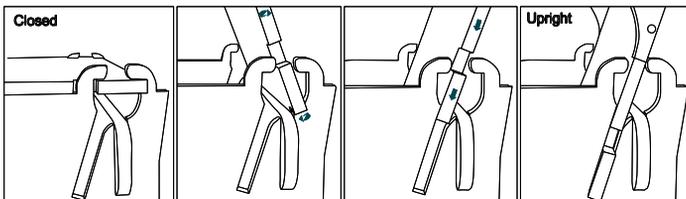

7. Putting on the lid Put the back of the lid into the slots on the top of the side panels, and then turn the

Now your pod is ready to be stored away, to reassemble your pod follow the instructions on the other side.

Don't be afraid to be rough with your pod, they're built for it!

Enjoy and feel free to leave some feedback or email us [info@rhino-pods.com](mailto:info@rhino-pods.com)

lid in the slots to the closed position. There are three positions for the lid: closed, upright and fully backward.

